



DEVICE BOOKLET

Read the operating and safety manual carefully.

Abrasion and wear and tear of the engine, batteries, brakes, drive system and tires depend considerably on how it is operated and maintained and therefore you must strictly comply with the following instructions:

Before starting work with the cart, make sure that the tire pressure is correct and equal on all wheels.

- During work avoid acute acceleration.
- Do not overload the vessel (see instructions).
- Strictly maintain the operating and safety instructions.
- Perform all maintenance and service activities as directed.

Instructions for use

- Batteries must be fully charged daily, before use.
- Use only the original charger.
- Do not disassemble the battery, engine or any other component.
- Inactive batteries must be charged once a month.
- Do not apply pressure (push or pull) to the controller handle.
- Do not drag any cargo or other equipment.
- Do not operate by a person who has not undergone training or understood how to operate, including:
 - Operating instructions
 - Safety instructions
 - Explanation of the limitations of the device.

The guidance and explanations regarding the device for a new operator will be provided by an operator with at least 20 hours of experience working with the device.



MAINTENANCE INSTRUCTIONS

General

To ensure the proper operation of the device it is important to carry out preventive treatments and regular maintenance according to the instructions.

Warning:

- Repair of the device will be done by the company's professionals only.
- Before starting a repair, move the power switch to OFF mode.
- Use insulated devices when handling.
- Do not perform any service while the engine or battery is hot.

Daily treatment

Check and verify:

- Normal and equal air pressure on all tires.
- Free movement of the accelerometer.
- The forward and backward direction switch is correct.
- The reversing buzzer is working.
- The hand brake and parking brake are in order.
- The charging status meter shows that it is above 90%.

Weekly treatment

All tests should be performed as per the **daily** treatment, and in addition make sure to:

- Grease bearing nipples.
- Check the stability and position of the axles.
- Fastening of the cladding screws.
- General cleaning of the device under air pressure only.
- Check the chain is stretched as required.

Monthly treatment

All daily and weekly activities must be performed, as well as:

- Check wheel bearings.

- Checking freedom of wheel movement.
- Integrity of the axles.

Safety Instructions

Remember, the device is for its application only!!!

- It is forbidden to transport people on the device.
- Do not load cargo above the permitted weight.
- Do not move on side inclines above 15 degrees.
- Do not load the vehicle with a load at a height that would limit the line of sight in the direction of movement.
- The parking brake must be integrated while loading and unloading.
- The handbrake must be incorporated while parked and when transferring the vehicle.
- The power switch key must be removed whenever the device is parked.
- When moving backwards (towards the operator's back), make sure there are no obstacles on the way and take extra care.
- Before operating the device, the operator must make sure that there is no one in his immediate vicinity.
- A new operator must receive comprehensive guidance and explanation of the device, including:
 - Operating instructions
 - Safety instructions
 - Explanation of the limitations of the device.
- The guidance and explanations for a new operator will be provided by an operator with at least 20 hours of previous experience working with the device.



WARRANTY CARD

Date: _____

Made devices: _____

Model: _____

Shield number: _____

Customer Name: _____

Address: _____

Dear customer,

We thank you for choosing to purchase the ultimate farming transport cart in the world. The device purchased by you was manufactured by OXEN1. with maximum attention to product quality, materials and assembly. The product warranty will be given according to the conditions set forth below. You are requested to carefully read this booklet and the vehicle book provided to you and ensure proper use of the vehicle and compliance with all instructions specified therein, so as not to void the warranty.

Note:

The warranty is given to the aforementioned customer listed in this certificate only. The rights under this certificate are non-transferable and are as stated below and subject to the conditions set forth below. The warranty, maintenance and handling instructions and all the instructions in the booklet are an integral part of the product. The responsibility will be valid only to the extent that the periodic inspections and servicing prescribed in this booklet are performed regularly and at the times prescribed in this book.

The product warranty is below and is subject to the terms set out below:

The warranty regarding the above device is for defects discovered in the device during the warranty period and resulting from a defect in material or workmanship only.

A key condition for the fulfillment of the warranty is:

Operation and use in accordance with manufacturer's instructions.

Execution of all maintenance instructions as detailed in the device operation book.

- The warranty does not include transportation or field repairs, and these will be carried out by the customer and at his expense.

Warranty does not cover:

1. If the device was serviced, repaired, maintained, or parts were replaced not according to the manufacturer's instructions.
 2. The defect arises as a result of the use of a non-original part of the manufacturer.
 3. The defect is the result of use not according to manufacturer's instructions, neglect, carelessness, improper maintenance, non-fulfillment of the operating or maintenance instructions, non-proper storage.
 4. Damages resulting from fire, accident, use that is not for the original purpose of the device.
 5. No warranty will be given if a modification was made to the device, welds that are not original or any improvisation whatsoever.
- Tire warranty applies to defects only for a period of 6 months.
 - Battery warranty is for 9 months from the date of purchase. Subject to the device working at least once every 10 days.
 - Warranty for the chassis of the device is for one year from the date of purchase.
 - Engine warranty is given for 9 months from the date of purchase.

It is hereby clarified that the liability for the device is limited to the above only and does not include direct or indirect losses resulting from down-time of the device or as a result of any malfunction.